


Changing the POGO board for EVOLUTION printers.

! CAUTION: Disconnect power to the printhead before attempting this procedure

- 1.** Remove the edge of the printhead label if it covers the top join label

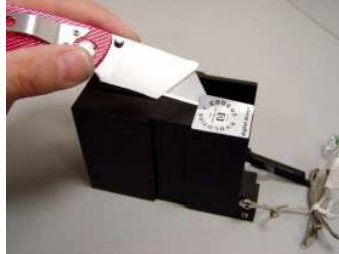

- 2.** Unscrew the printhead side screws for the larger section of the printhead with a Phillips head (PH1) "Fine" screwdriver



- 3.** Unscrew the bottom section of the printhead with a Phillips head (PH1) "fine" screwdriver.



- 4.** Remove the top and side casing.
You MAY wish to cut the bottom ID label to make removal easier



- 5.** Remove the "L-shaped" pair of circuit boards



- 6.** Gently pry the circuit boards apart, taking care not to bend the pins.



7. Replace the circuit board, by carefully aligning the pins and gently pressing it back into position.



! **CAUTION: Ensure the board is installed in the correct direction. Take care not to damage the pins.**

8. Replace the “L-shaped” pair of circuit boards into the printhead section



9. Fit the top and bottom covers



10. Tighten all screws

